


1) TRIM SCREWS
2) LEVER
3) LEVER SET SCREW
4) INSIDE ROSE SUB-ASSEMBLY
5) SPINDLE
6) OUTSIDE ROSE SUB-ASSEMBLY

7) LATCH
8) LATCH FASTENERS
9) STRIKE PLATE FASTENERS
10) STRIKE PLATE
11) DUST BOX

CAREFULLY READ THE INSTRUCTIONS
BEFORE INSTALLING


STEP 1)

A) PREPARE THE DOOR ACCORDING TO DOOR PREPARATION GUIDE **DP-462**.
B) PREPARE THE STRIKE ACCORDING TO **DP-327** AND INSTALL THE STRIKE PLATE.

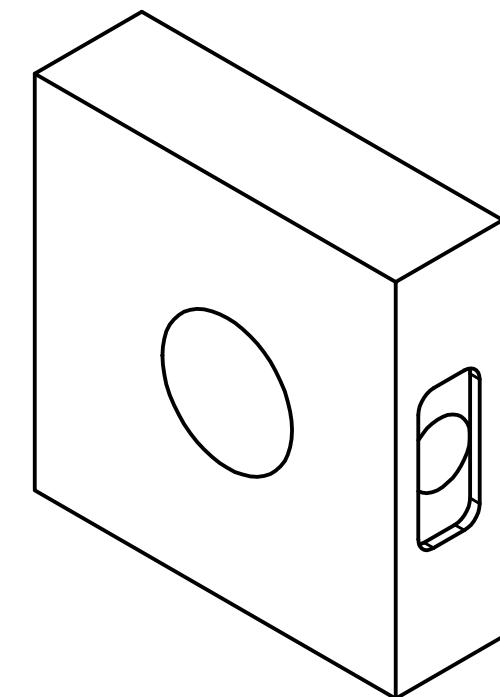


STEP 2)

SELECT THE CORRECT BACKSET POSITION OF THE SPINDLE HUB OF THE LATCH ACCORDING TO THE DOOR PREPARATION, 2-3/8" OR 2-3/4". (SHOWN AT 2-3/4")

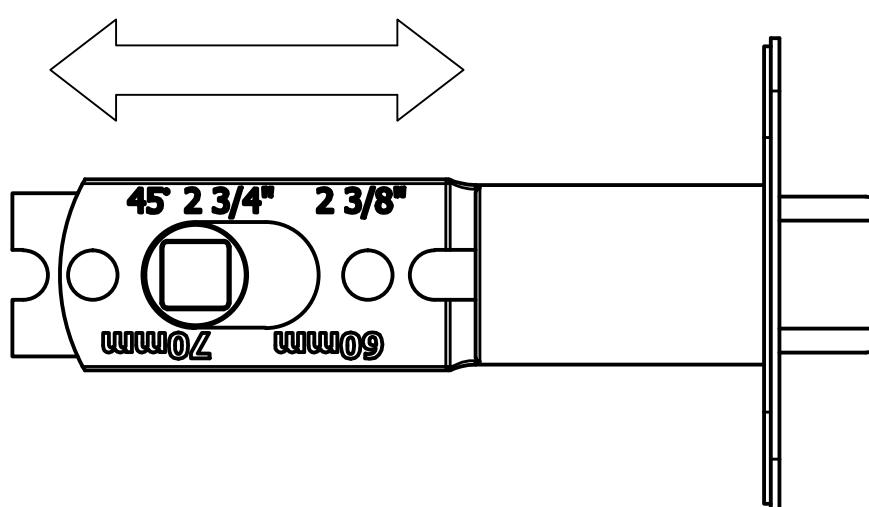


STEP 3)

WITH THE LATCH BOLT ORIENTED IN THE CORRECT DIRECTION, INSERT THE LATCH (7) INTO THE DOOR AND SCREW IN PLACE WITH THE PROVIDED FASTENERS (8).

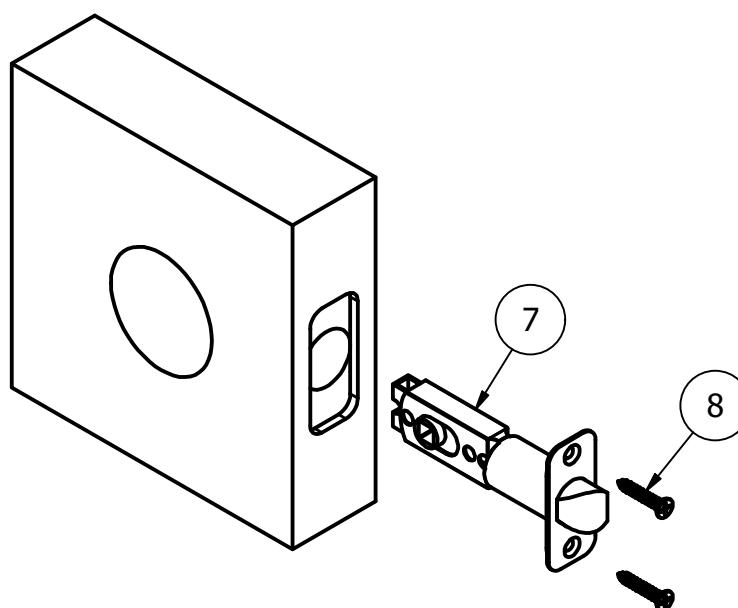

STEP 4)


EXAMINE THE SPINDLE (3) AND NOTE THE LOCATION OF THE NOTCHES (B). FROM THE INSIDE OF THE DOOR, FULLY INSERT THE END OF THE SPINDLE THAT IS FARthest FROM THE NOTCHES INTO THE SPINDLE HUB OF THE LATCH.

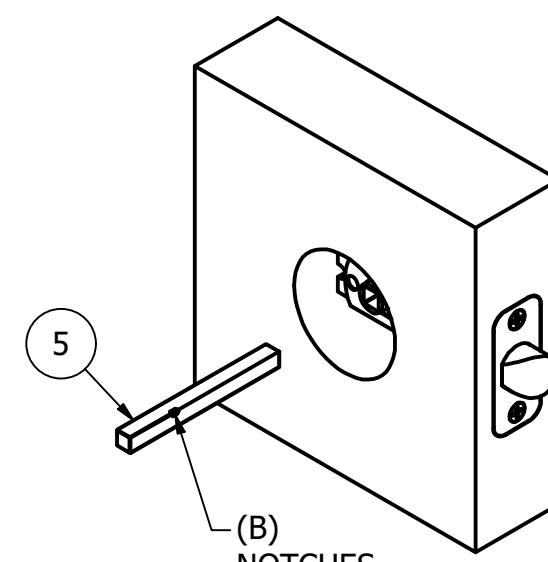

STEP 5)


CHANGE THE HANDING OF THE LEVERS IF NEEDED WITH THE FOLLOWING PROCEDURE:

- 1) LOOSEN THE SET SCREW
- 2) REMOVE THE LEVER FROM THE STEM
- 3) ROTATE THE LEVER 180 DEGREES
- 4) PLACE THE LEVER ON THE STEM
- 5) TIGHTEN THE SET SCREW

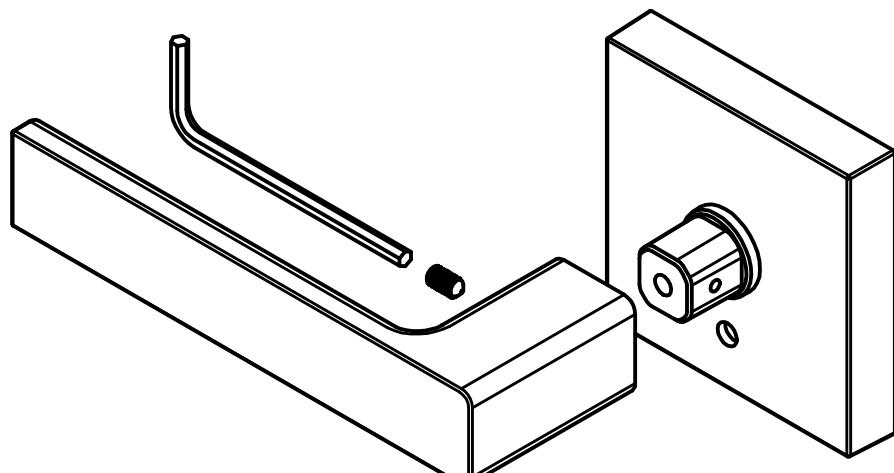

STEP 6)

- 1) INSERT THE OUTSIDE LEVER (6), WITH THE POSTS GOING THROUGH THE LATCH HOLES.
- 2) INSERT THE INSIDE LEVER (2), CAREFULLY ALIGNING THE SCREW HOLES WITH THE POSTS.
- 3) HOLD THE LEVERS IN THE CORRECT POSITION WHILE FASTENING TOGETHER WITH THE TRIM SCREWS (1).

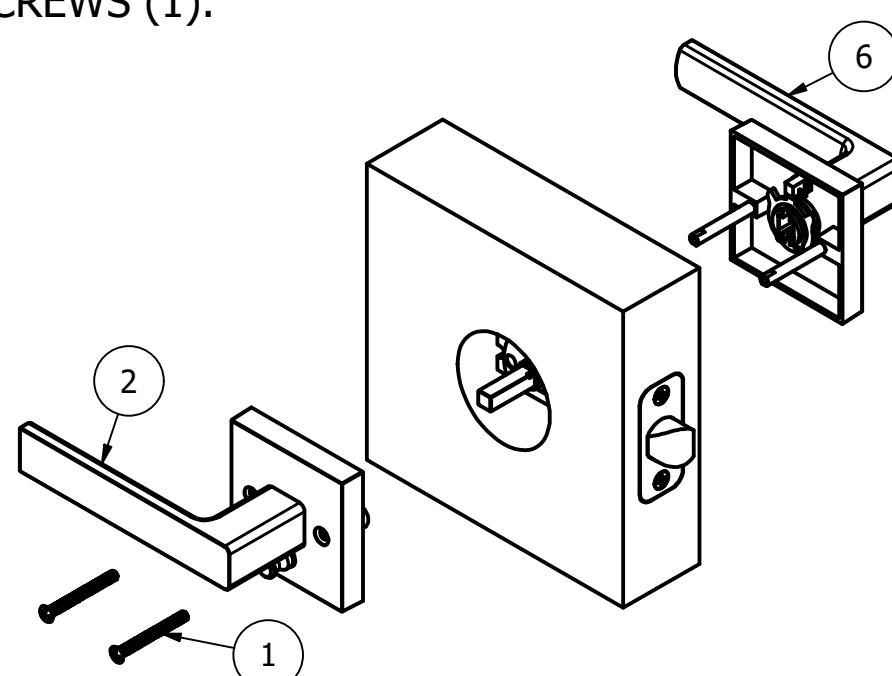

STEP 7)

USE THE FOLLOWING STEPS TO CHECK FOR PROPER FUNCTION BEFORE CLOSING DOOR:

- 1) ROTATE EACH LEVER TO VERIFY THAT THE LATCH BOLT RETRACTS.
- 2) VERIFY THAT DEPRESSING THE PRIVACY PIN LOCKS THE OUTSIDE LEVER.
- 3) VERIFY THAT THE INSIDE LEVER, WHEN ROTATED, UNLOCKS THE DOOR.
- 4) VERIFY THAT THE LATCH BOLT ENGAGES THE STRIKE WHEN THE DOOR IS CLOSED.
- 5) USE THE PROVIDED HEX WRENCH TO VERIFY THAT THE DOOR CAN BE UNLOCKED FROM THE OUTSIDE.

