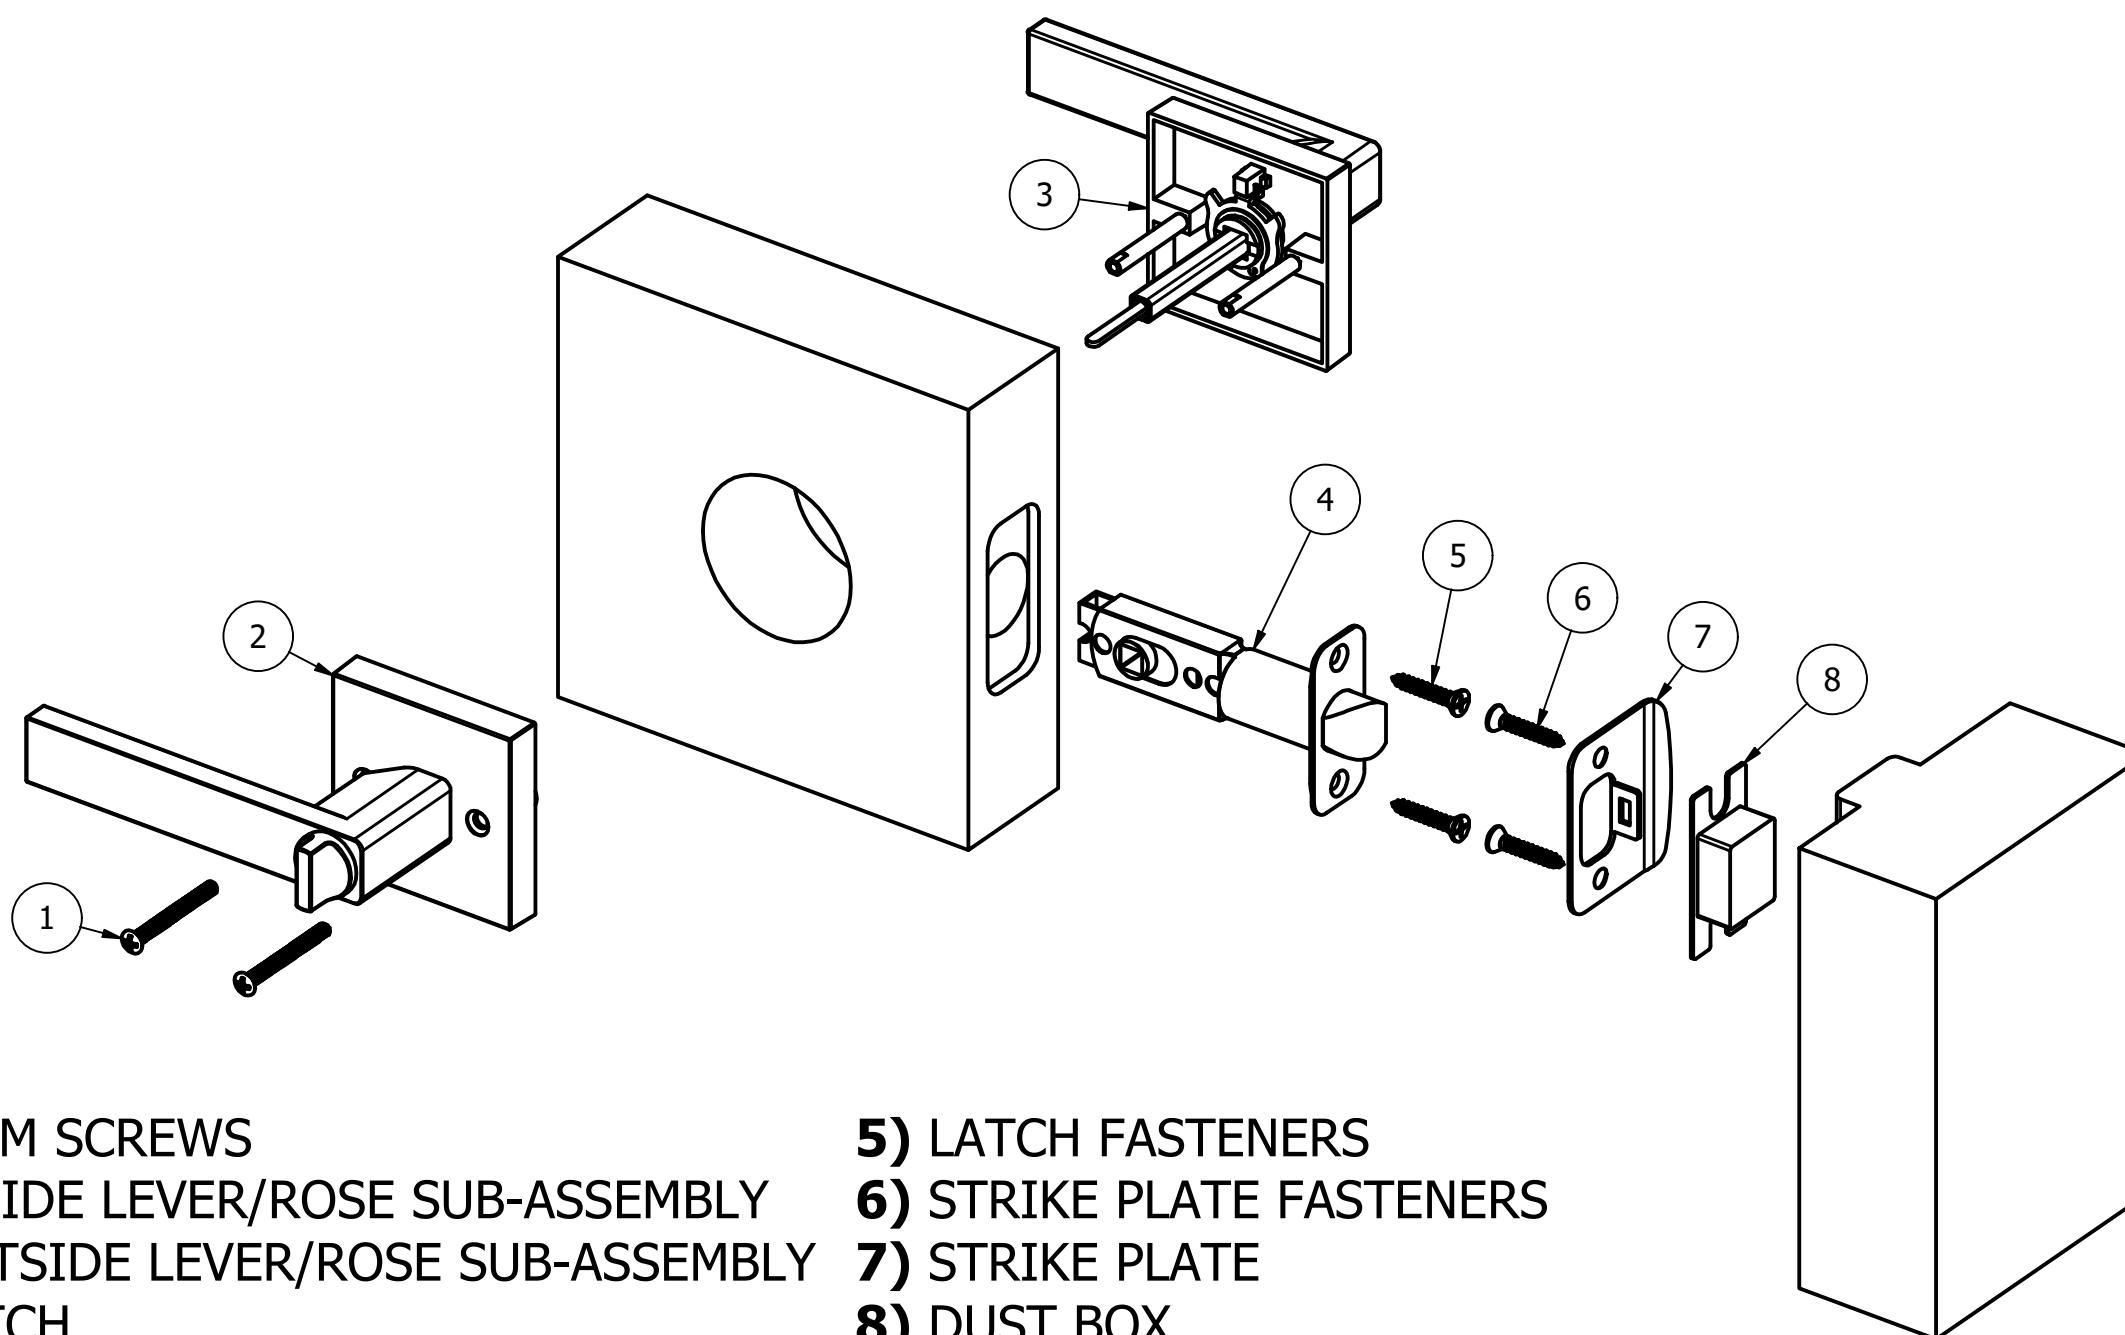
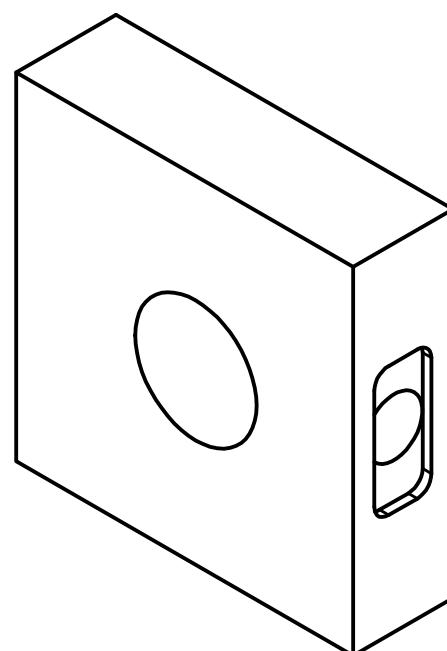


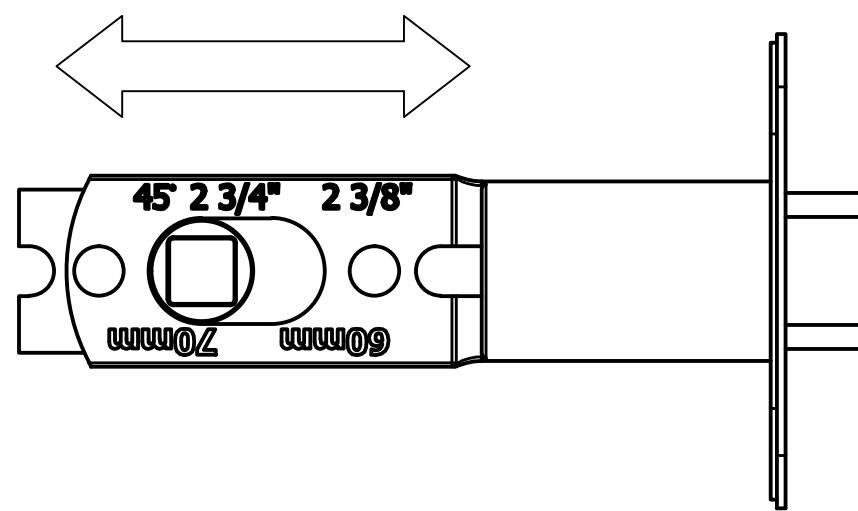
CAREFULLY READ THE INSTRUCTIONS BEFORE INSTALLING

**STEP 1)**

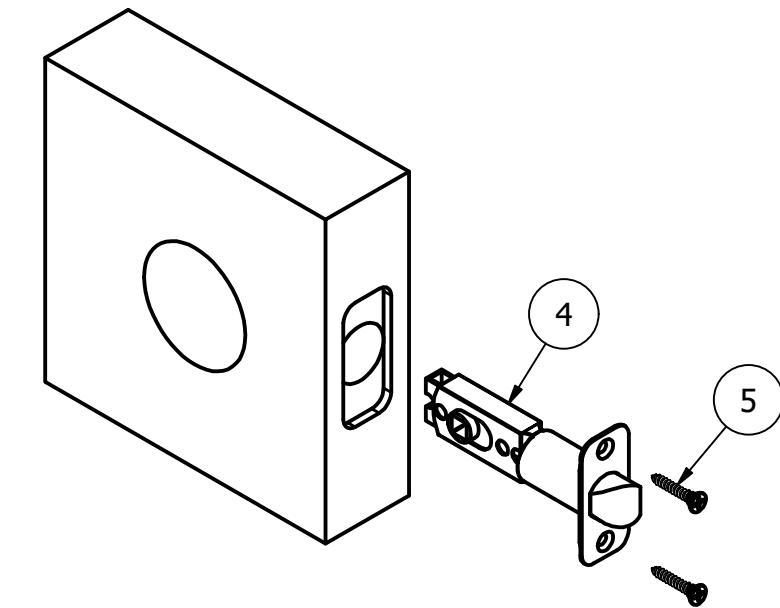
**A)** PREPARE THE DOOR ACCORDING TO DOOR PREPARATION GUIDE **DP-462**.  
**B)** PREPARE THE STRIKE ACCORDING TO **DP-327** AND INSTALL THE STRIKE PLATE.

**STEP 2)**

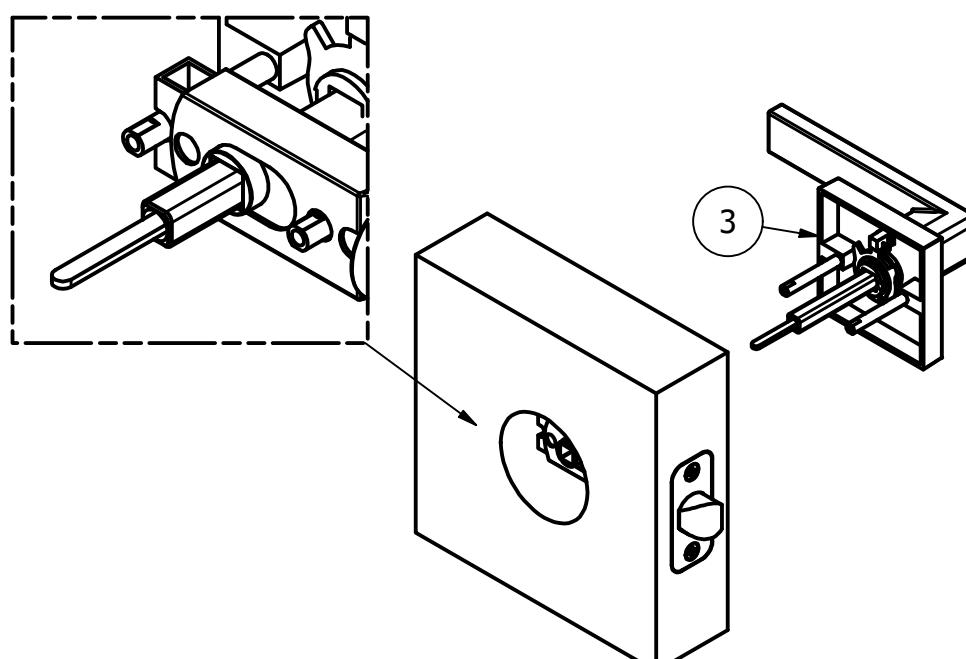
SELECT THE DESIRED LATCH BACKSET BY SLIDING THE SPINDLE HUB, ACCORDING TO THE DOOR PREPARATION, 2-3/8" OR 2-3/4." (SHOWN AT 2-3/4")

**STEP 3)**

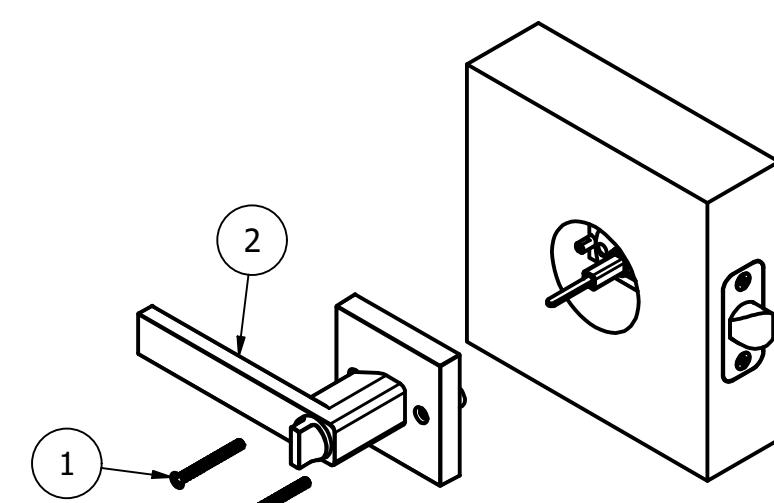
WITH THE LATCH BOLT BEVEL ORIENTED IN THE CORRECT DIRECTION, INSERT THE LATCH (4) INTO THE DOOR AND SECURE IN PLACE WITH THE PROVIDED FASTENERS (5).

**STEP 4)**

INSERT THE OUTSIDE LEVER-ROSE SUB-ASSEMBLY (3) SO THAT THE SPINDLE AND TWO POSTS GO THROUGH THE CORRESPONDING HOLES IN THE LATCH, WITH THE ROSE FLUSH WITH THE DOOR SURFACE.

**STEP 5)**

**A)** INSERT THE INSIDE LEVER (2), CAREFULLY ALIGNING THE SCREW HOLES WITH THE POSTS.  
**B)** HOLD THE LEVERS-ROSE SUB-ASSEMBLIES IN THE CORRECT POSITION WHILE FASTENING TOGETHER WITH THE PROVIDED SCREWS (1).

**STEP 6)**

USE THE FOLLOWING STEPS TO CHECK FOR PROPER FUNCTION BEFORE CLOSING DOOR:  
**A)** ROTATE EACH LEVER TO VERIFY THAT THE LATCH BOLT RETRACTS.  
**B)** VERIFY THAT THE LATCH BOLT ENGAGES THE STRIKE WHEN THE DOOR IS CLOSED.  
**C)** VERIFY THAT THE LOCK MECHANISM WORKS.

