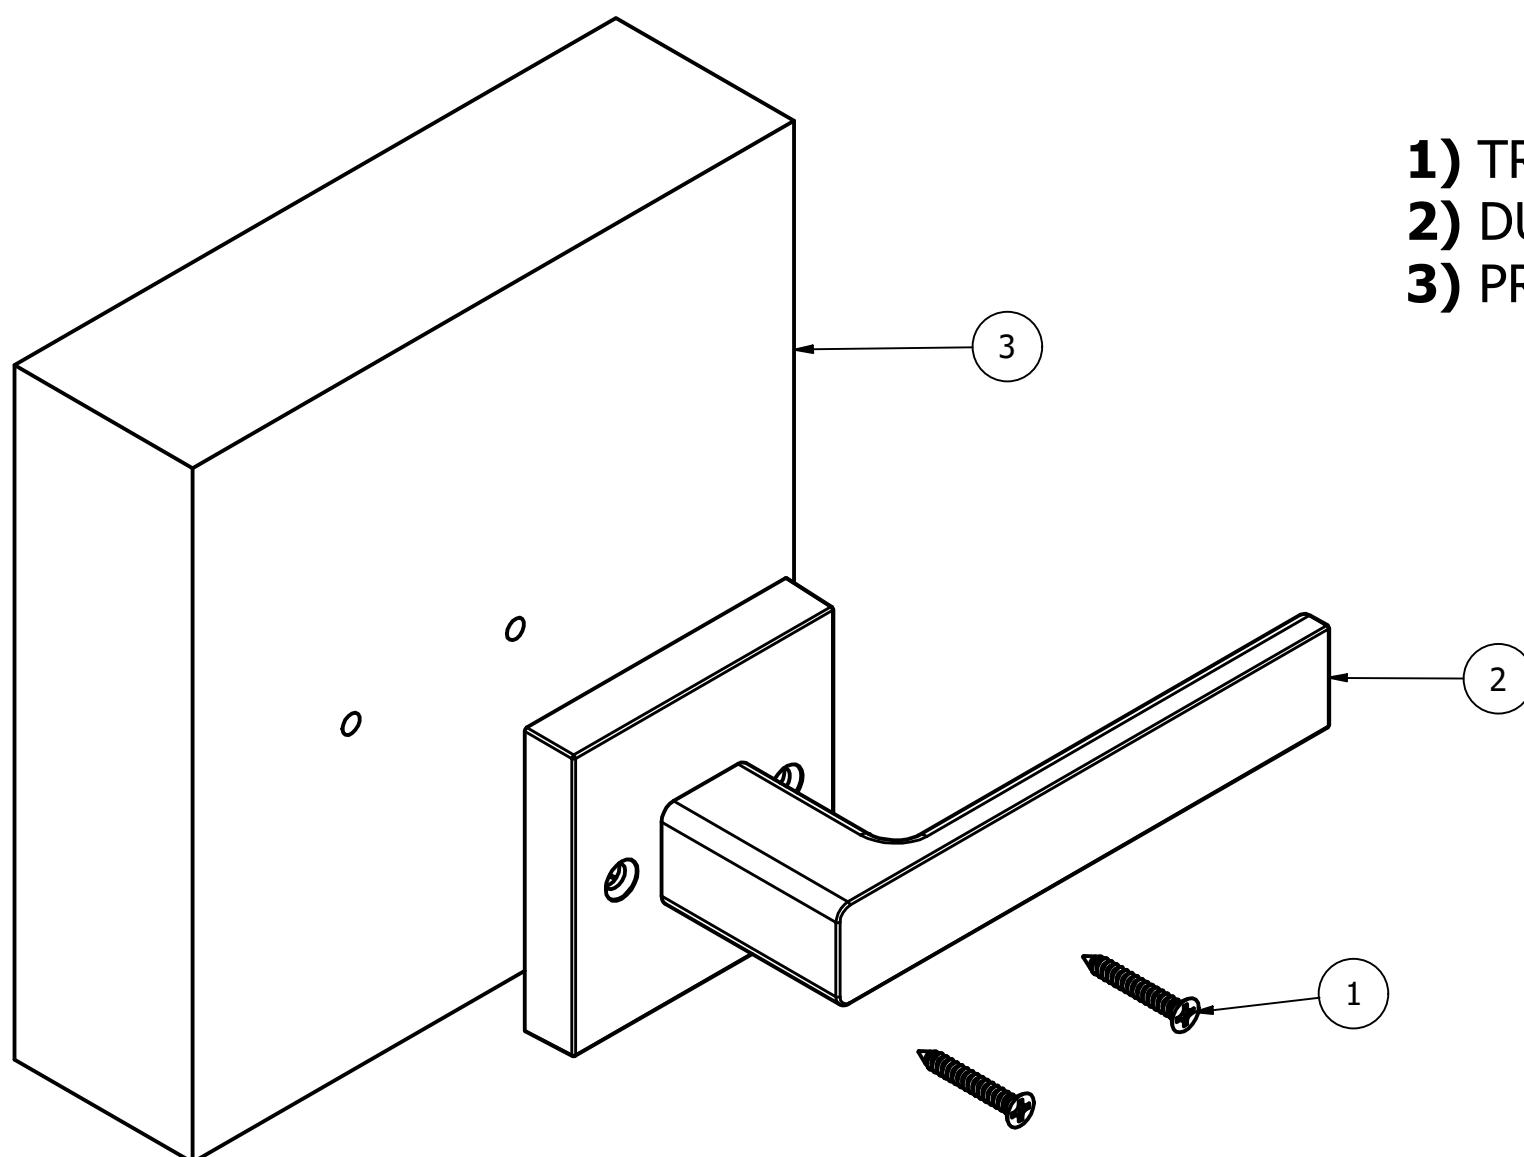
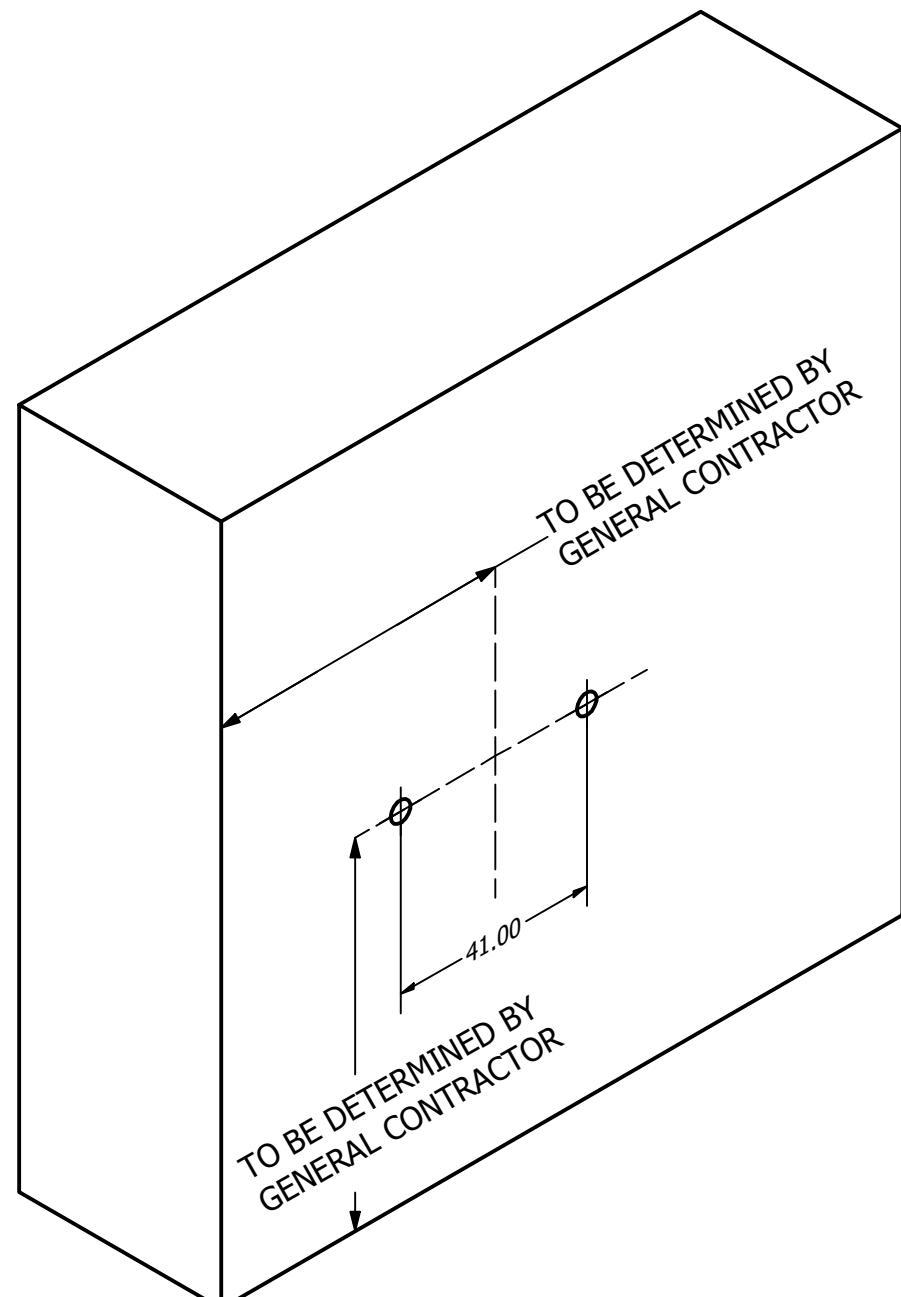


CAREFULLY READ THE INSTRUCTIONS BEFORE INSTALLING

**STEP 1)**

- A) PREPARE THE DOOR ACCORDING TO THE DIAGRAM BELOW, WITH TWO PILOT HOLES 41mm CTC.
- B) PLACEMENT OF THE TRIM TO BE DETERMINE BY THE GENERAL CONTRACTOR FOR BOTH HEIGHT AND BACKSET - TYPICALLY 60 OR 70mm (2-3/8", 2-3/4").

**STEP 2)**

- A) ALIGN THE TRIM (2) WITH THE DRILLED HOLES AND INSERT THE FASTENERS (1).

